


# Circleg Dynamic Foot Adjustment

## 1 Select




Bodyweight

Foot size

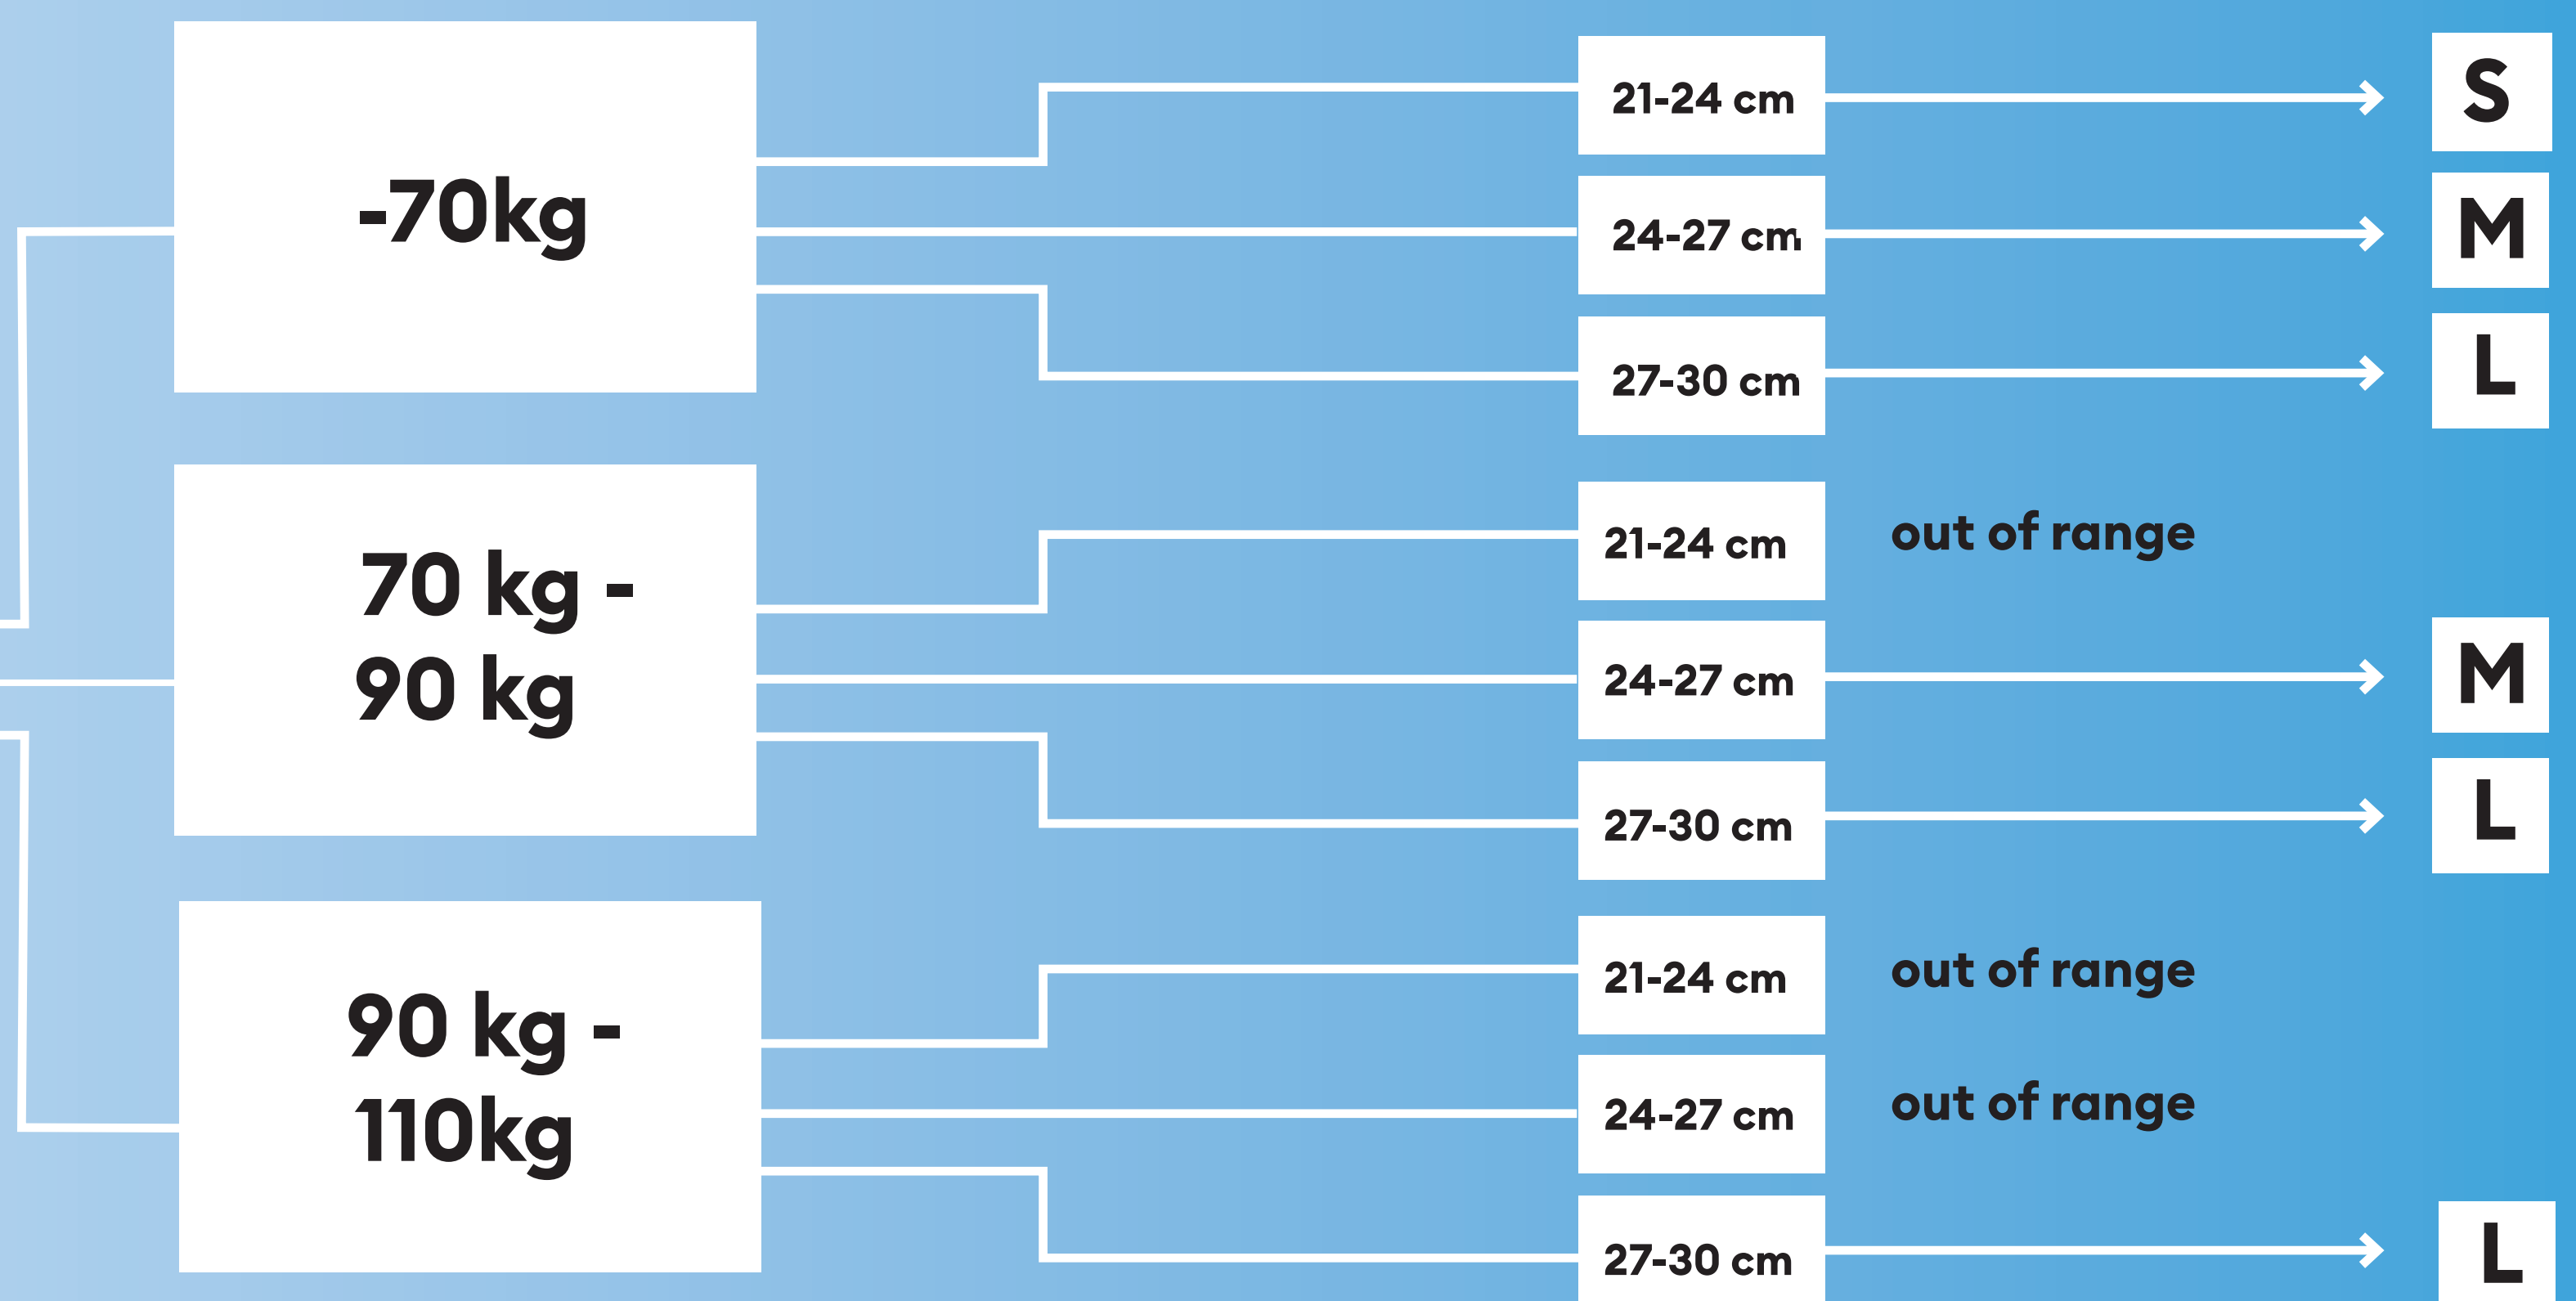


## 2 Prepare

Clamp, screw driver, cutter, file, glue, jig or hand saw (metal blade)

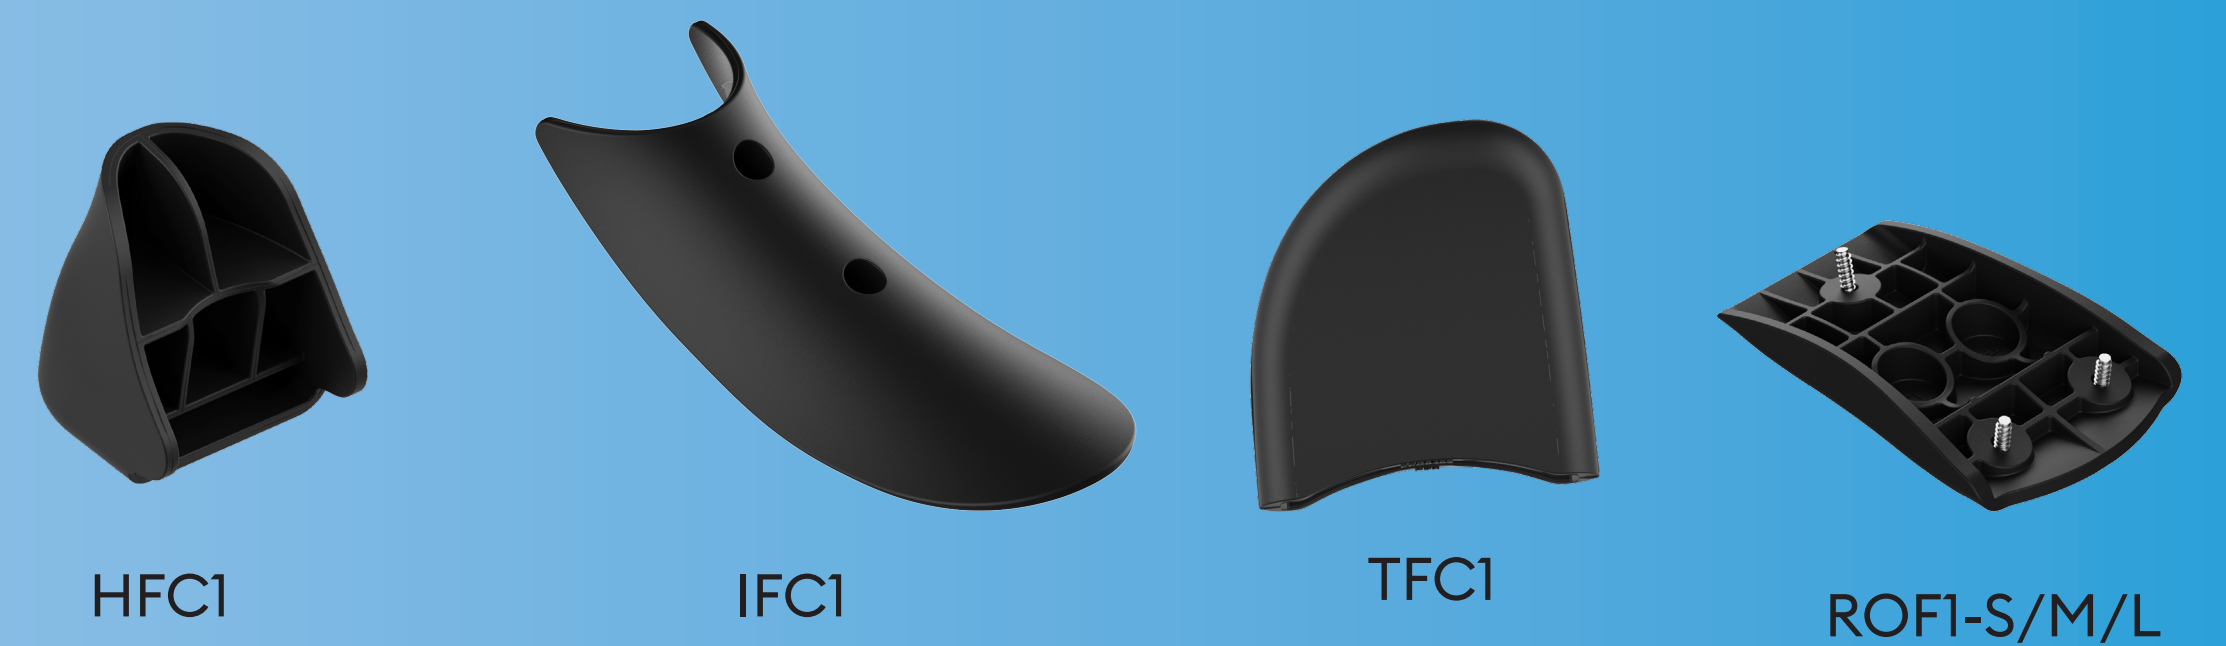


## 3 Adjust

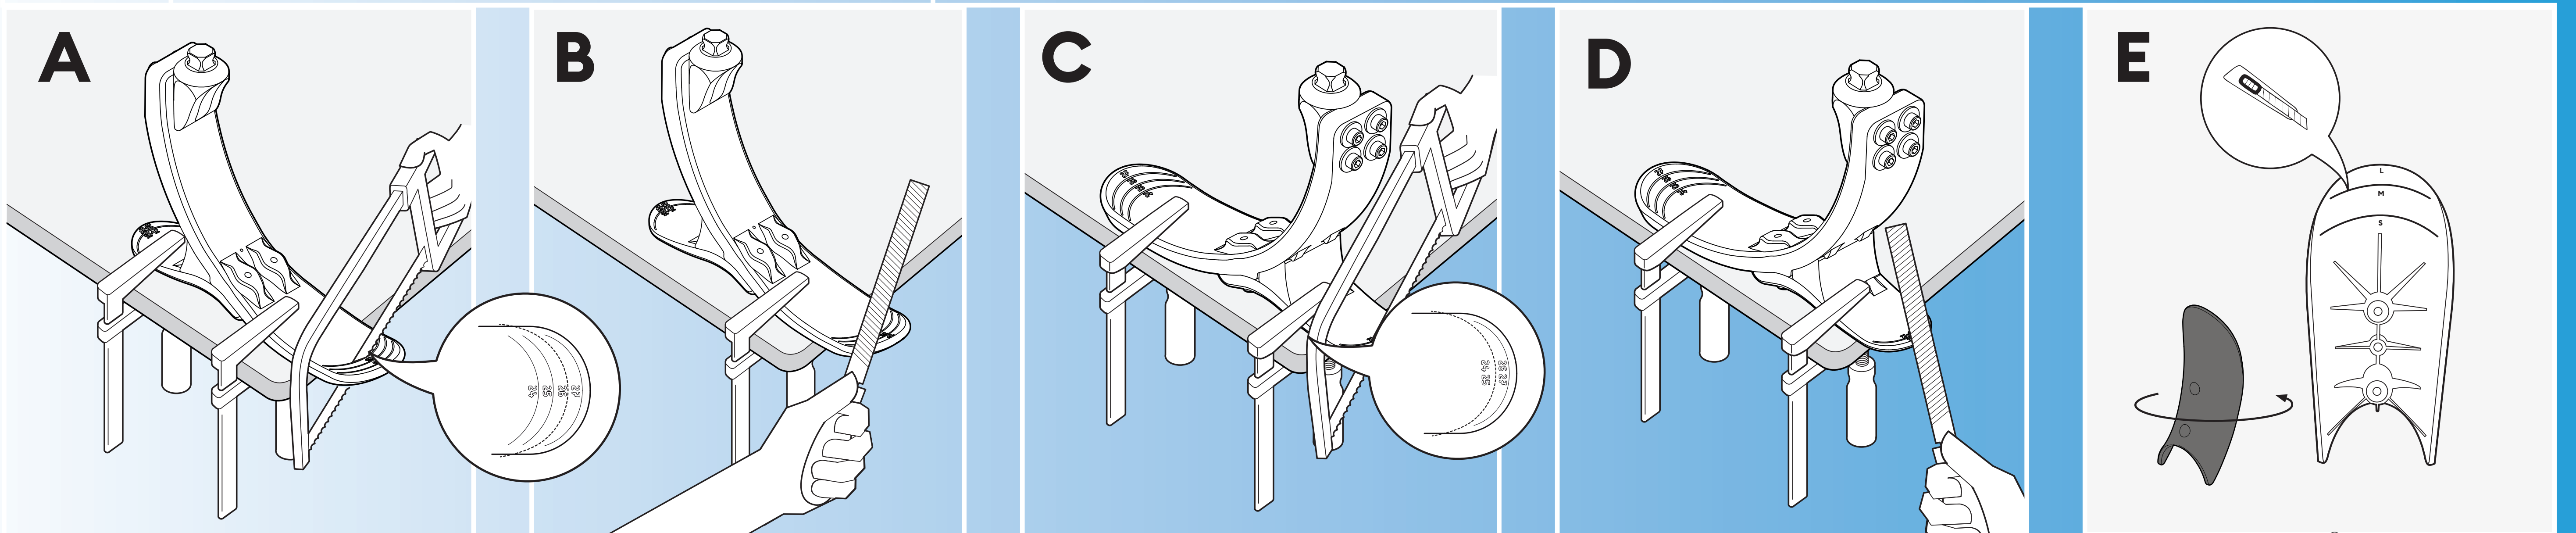

## 4 Assemble



Make sure the glue is TPU and PP suitable

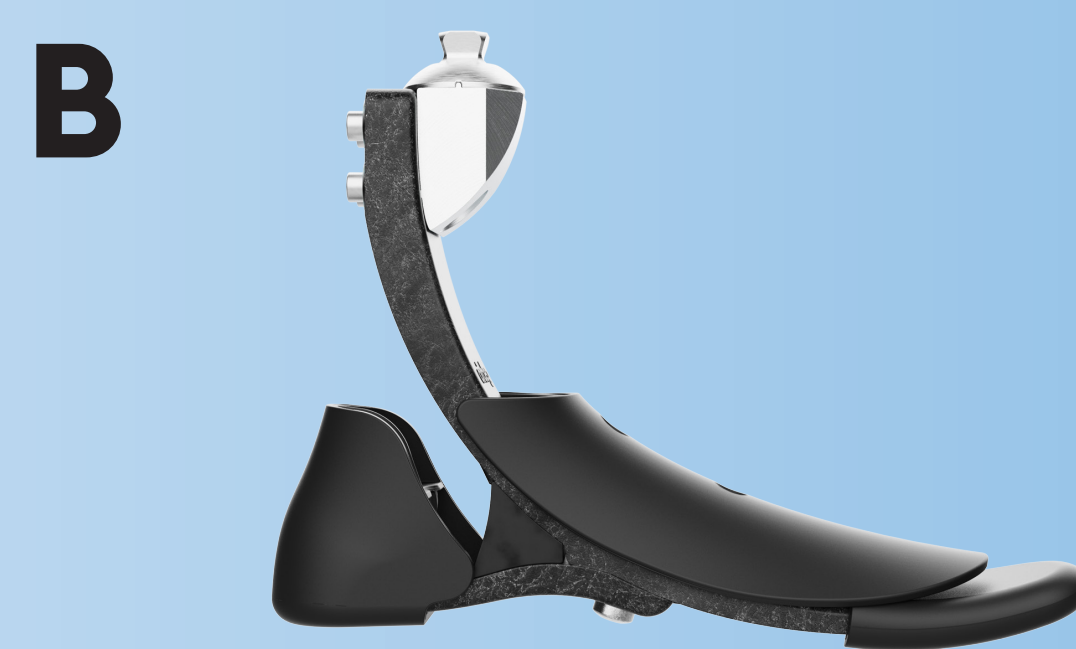

Complete Bench Alignment prior to adding the Sole Pad!



IP-FISML-EN V02 REV00



Scan the code to get the instruction video!

circleg.world  
sales@circleg.world  
support@circleg.world

circleg